


# AC4D Series

## Instructions for Use


FACT SHEET

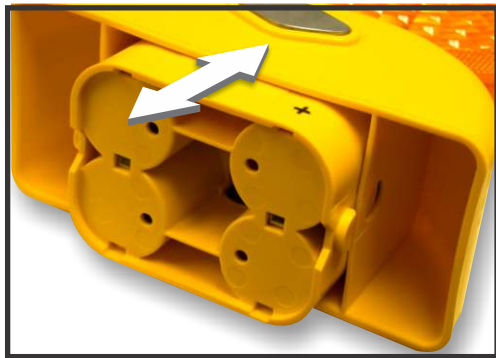


(A)



(B)

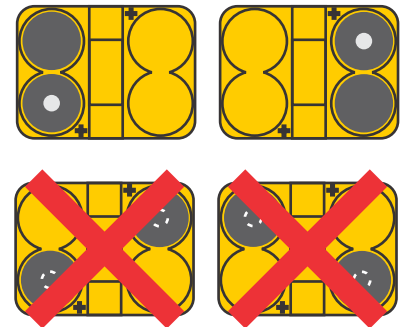

- **(A) Battery Installation** - Remove battery case by pulling out on the inside walls that engage the battery case lugs, first one side then the other. Install two or four "D" batteries, note the battery orientation indicators on the outside of the battery case. If two batteries are to be used see figure (B) above. Re-insert the battery case by pushing it in until the lugs snap into place.
- **(C) Operation** - Facing the front of the light, locate and depress the ON-OFF switch using the SWITCH KEY, select operating mode (Flash or Steady Burn) by depressing the MODE SWITCH.

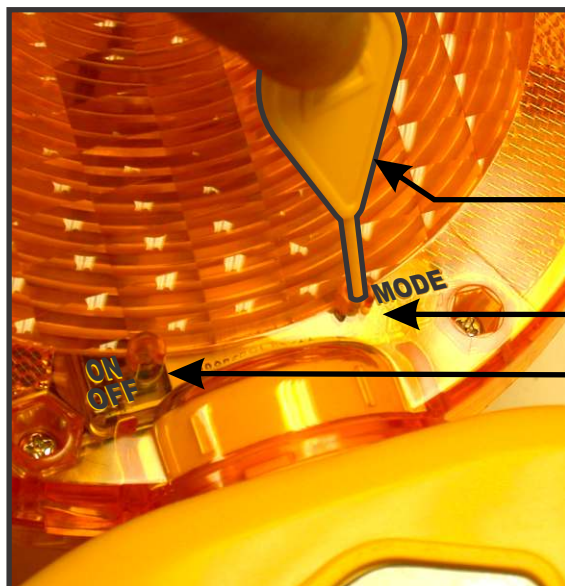


Photocell  
Equipped

SWITCH KEY

MODE SWITCH

ON-OFF

(C)

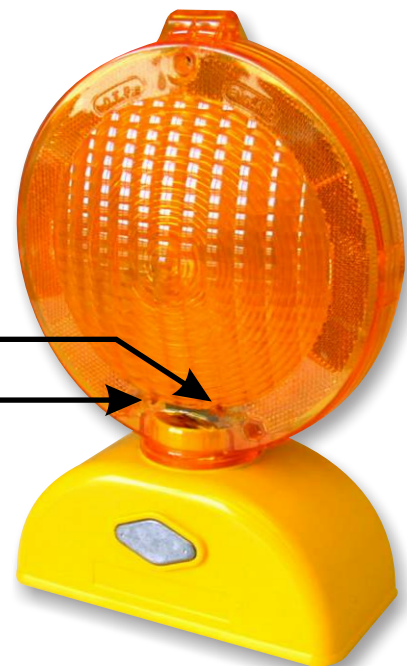

# DICKE Safety Products

[www.dicketool.com](http://www.dicketool.com)

Illinois - 1201 Warren Avenue - Downers Grove, IL 60515 - Ph: 630.969.0050 - Fax: 630.969.3973  
Oregon - 1845 Anunsen Street, N.E. - Salem, OR 97301 - Ph: 800.333.5641 - Fax: 503.364.0340